# muli

## Assembly instructions Dog accessories





## General

The muli dog flap enables dogs to comfortably and indecently enter the basket from the front. The cover can be opened and closed in a flash using the three Loxx buttons on the left basket wing.

The muli dog cushion covers the hard basket floor and forms a soft and comfortable surface for the dog.

Continuously updated installation instructions are available in German and in other languages at our download portal:

https://muli-cycles.de/de/downloads



Δ

## List of textiles used

This manual uses the following text types and lists:

- Instructions (in fixed order) 1
- $\rightarrow$ Guidelines (in any order)

#### Symbols / Labels used

This manual uses the following symbols and/or labels:

- / The warning triangle in combination with the word "WARNING" indicates hazards that could result in sever personal injuries or death.
- $\bigwedge$  The warning triangle in combination with the word "CAREFUL" indicates hazards that could result in slight personal injuries and property damages.

## Safety instructions

- /!\ WARNING! Risk of accident and injury An open flap can be irritating when riding or get caught in the front wheel spokes resulting in serious falls and injuries.
- → Close the dog flap before every ride. Never ride with opened dog flap.

- /!\ WARNING! Risk of accident and injury A freely moving dog in the basket creates shifts in weight which could lead to loss of control over the bike.
- Secure your dog in the basket well, perhaps  $\rightarrow$ with a leash, so that it cannot move freely during the ride.

### /!\ CAUTION!

The dog flap and the muli dog cushion do not constitute security systems for the dog during the ride. They are merely intended for entry into the basket and comfortable seating in the basket. Make sure to secure your dog with an appropriate seat strap on the basket or the steering tube so that it cannot jump out of the basket or fall down unintentionally.

CAUTION! Risk of injury

If the basket is not locked with a locking rod when transporting a dog the basket can close during the ride in certain situations, possibly injuring the dog.

- → Always insert a locking rod in the basket when transporting a dog in the basket.
- CAUTION! Risk of injury Neither the dog basket nor the dog cushion are suitable for consumption.
- → Make sure your dog does not chew and swallow the dog flap and cushion.
- ⚠ CAUTION!

Without the rubber mat in the basket a dog can push the dog cushion in the gap between the baskets and get trapped.

→ Always use the dog cushion with the standard rubber mat placed in the basket. Place the cushion on the rubber mat.

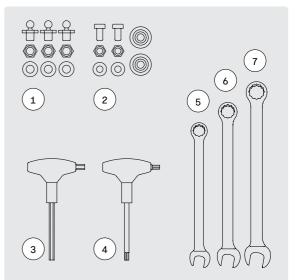


FIG.1

- 1 DOG FLAPS 3 x Loxx screw 3 x Self-Locking Nut M5 3 x M5 washer
- 2 DOG CUSHION
  - 2 x Push Button with Screw 2 x Nut M4 2 x M4 washer

#### **REQUIRED TOOLS**

- 3 1 x Allen 3/HEX 3
- 4 1 x Torx 20
- 5 1 x Open-end wrench 7
- 6 1 x Open-end wrench 8
- 7 1 x Open-end wrench 9

- Loosen the screws A that fasten the front basket cover on the perforated plate and on the basket tube at the bottom using Torx keys and openend wrenches 7. Remove the basket cover but keep the screws, nuts and washers. (Fig. 2)
- 2 First screw the dog flap and the new cover tight at the bottom right and left on the basket tube Use the Torx keys. (Fig. 3)
- 3 Insert a locking rod at the front or at the rear in the basket holder. (Fig. 4)



FIG.3







- 4 Then, screw the cover on the right basket wing tight. Set the screws on the position of the old cover. Use the Torx key and the open-end wrench 7. (Fig. 5)
- 5 The correct position of the pin must approximately correspond to the position of the screws of the old cover. Insert the pin from outside through the left perforated plate, first place the washer inside and then the nut. (Fig. 6)
- 6 Screw the three Loxx pins with Open-end wrench 9 and open-end wrench 8. (Fig. 7)
- 7 Press the three Loxx buttons on the pin B to close the flap (Fig. 8)
- Slightly pulling on the button of the Loxx screws opens the cover on one side for the dog to enter. (Fig. 9)



FIG.6

11









FIG.8



## Assembly instructions Dog cushion

- 1 Place the cushion in the basket with the open side facing forward. (Fig. 10)
- 2 Determine the position of the push button in the perforated plate left and right using the button on the cushion. (Fig. 11)
- 3 Screw the push button in the perforated plate with the Allen key and Open-end wrench 7 and press the cushion tight. (Fig. 12)



FIG.10

13

12



FIG.11



14

BA-EX-17V23.1 ©muli cycles GmbH

Widdersdorfer Str. 190 50825 Köln

Text and graphics muli cycles GmbH

Photography Tim Kaiser

Layout Friederike Wolf, Frieder Oelze

**Production** Misprint, Erfurt

#### Paper

Circleoffset Premium White (FSC-certified, awarded the blue environmental angel and EU Ecolabel)

www.muli-cycles.de