


# mulli

VERSION US 23.1


## Assembly instructions Child Seat

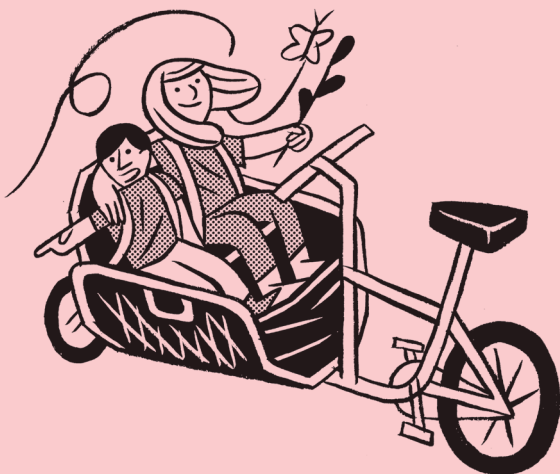


## General

Children ride comfortably and securely in the muli. Because the muli child seat is not a hard seat but a mounted seat made of solid fabric and stable, padded backrest. Moreover, elastic rubber elements are integrated in the webbing straps so that minor road bumps are cushioned effectively.

Two children fit in the seat and can ride both in and as well as against the direction of travel. This way they have either the parents or the surroundings in view. A three-point harness that can be mounted at two different heights is used for fastening and is equipped with a soft padding in the neck and throat area. The magnetic Fidlock® fasteners make fastening as easy as ABC.

 **WARNING!** Risk of injury  
Please read these instructions carefully before installing and using the child seat.

 **WARNING!**  
**FAILURE TO COMPLY WITH THE INSTRUCTIONS AND WARNINGS IN THIS MANUAL COULD RESULT IN SERIOUS INJURY OR DEATH OF THE PASSENGER OR RIDER.**

Continuously updated installation instructions are available in German and in other languages at our download portal:

<https://muli-cycles.de/en/downloads>

→ Regularly check if a current version of your manual is available in the portal.






## List of text types and lists used

This manual uses the following text types and lists:


- 1 Instructions (in fixed order)
- Explaining Guidelines (in any order)
- Listings

## Symbols / Labels used


This manual uses the following symbols and/or labels:

-  The warning triangle in combination with the word “WARNING” indicates hazards that could result in severe personal injuries or death.
-  The warning triangle in combination with the word “CAUTION” indicates hazards that could result in slight personal injuries and property damages.
-  The circled exclamation mark indicates important additional information.


## Safety instructions

 **WARNING! Risk of injury**  
Transporting children in the muli without fastened seat belt can result in serious injuries.


- Always transport children of up to 7 years old with fastened safety belt in muli child seat. Have children wear a helmet.


 **WARNING! Risk of injury**  
Never transport children in a damaged child seat.


- Before every ride check the seam, rivet, plug, strap and screw connections on the child seat for tightness and integrity.

 **CAUTION! Risk of injury**  
Even if the child seat is equipped with shock absorbers it may not be able to adequately protect children against injuries in case of an aggressive driving style and strong road bumps.


- Make sure to ride carefully and proactively and avoid strong road shocks, e.g. through riding over curb edges and abrupt breaking.

 This product is only suitable for use on the “muli” bikes of muli-cycles GmbH.


 Keep the child seat away from fire.


-  The bicycle may behave differently with one or two children in the seats.
- Always instruct children NOT to rock, bounce, or lean.
- The tire pressure must correspond to the specification on the tire casing.  
Check the tire pressure before every ride!
- Regardless of height, the seat height of the child is crucial for safety. The maximum permitted seat height (from the ground to the top of the head) is:
  - 21.7" (55 cm) with rain cover.
  - 24.8" (63 cm) without rain cover.
- Never leave children unattended in the child seat. Ensure that they are always supervised by someone responsible for their safety.
- Never park your bike with children in the front on a slope (even on small ones). The stand could be overcome by the weight of the bike alone or by a small impact and your bike could tip over.
- Ensure that children are appropriately clothed preventing them from getting chilled or overheated while riding!
- Replace child seat if defective or broken. Do not continue usage if the child seat is defective or broken.
- Ensure that the child seat is clear during storage and is not under heavy equipment.
- Do not modify the child seat or any of its parts. It will void the warranty.

## Cleaning instructions

-  Clean only with soap and water.
- In the event, that your child seat is not utilized for an extended period of time, we advise that you clean the cover in accordance with the instructions provided herein and store it in a cool, dry place away from direct sunlight.
- Please refrain from using detergents or other solvents to clean the seat.
- Allow to dry completely before storage.

## Proper use

 Comply with these usage recommendations. Otherwise, you risk exceeding the load limits of the child seat and damaging the seat and the basket.

 No liability or warranty is assumed if the child seat is used for purposes other than those for which it is intended.


The seat provides place for two children and may be loaded up to max. 88 lbs (40 kg).


A child may be transported up to a weight of 48 lbs (22 kg).

- Each child of up to 7 years of age must be secured with a restraining system and must wear a helmet.
- The muli child seat is not suitable for babies/ children who are still unable to sit independently.
- Never use muli child seats for children who are not able to sit independently. The muli child seat does not offer sufficient head support which may lead to neck or head injury.
- Children under 2 years of age shall ride in a rear-facing position.
- Transporting of children over the age of 7 in muli child seat is possible in principle if the specified load limits are not exceeded.
- You must ensure that the children sit comfortably in their seat, considering their size, without impairing the rider during steering and braking.

## Assembly instructions

- 1 Place the child seat folded in the back side in the basket facing upwards - for installation with child facing the direction of travel proceed as in Fig. 1, for installation against the direction of travel rotate by 180°. (Fig. 1)
- 2 Slide the two plastic toggles on the back side of the seat through basket eyelets. Use the upper eyelets and push the toggle with one end from the bottom upwards through the hole. (Fig. 2)
- 3 Hold the rod with both hands. Insert the rod evenly and parallel in the holder left and right. If needed, press the basket wing slightly apart with both hands. (Fig. 3)

 CAUTION! Risk of pinching or entrapment.

 CAUTION! Risk of breakage  
Lifting the locking rod only on one side when being removed can result in the rod being bent on the other end or even breaking.

→ Always insert the rod of the muli child seat in and out parallel and evenly in the bracket in the holder.

- 4 Pull out the locking pin, turn slightly so that the bolts snap in the holder and the rod is secure. (Fig. 4)
- 5 The child seat can be mounted both in and against the direction of travel. (Fig. 5/6)


 This procedure applies for the installation of the seat both against as well as in the direction of travel. Always make sure to fasten the plastic toggle on the basket eyelet. Otherwise, the back rest is not adequately fastened on the basket.



FIG. 1



FIG. 2



FIG. 3



FIG. 4



FIG. 5



FIG. 6

## Setting the child seat

**⚠ WARNING! Risk of injury**  
Transporting children in damaged child seat or incorrectly installed safety belt can lead to injuries.

→ Before every ride check the correction position and integrity of the safety belt.

### Set the belt length

Using the regulator on the shoulder straps you can adjust the length of the belt to the size of the child.

→ Make sure the straps fit your child's shoulder and are tight enough to keep them securely in the right seating position.

The straps for front rod can also be adjusted in length. They regulate the height of the seat area. (Fig. 7)

→ Always adjust the seat at least high enough that it does not hit the side of the basket wings when children are in the seat.

### Set the belt position

The position of the belt can be adjusted to the size of the child both at the back rest as well as in the lower seat area. Oval hole eyelets are embedded in the seat for this purpose.

1 Slightly pull out the belt to be moved on the back or lower side of the seat so that you can freely move the regulator.

- 2 Now turn the regulator with the narrow side to the hole and insert it together with the belt through the opening. (Fig. 8)
- 3 The regulator is now on the front side and the belt loosened. Now use the same procedure to slide the regulator to the desired position again through eyelets in the back rest of the seat. (Fig. 9)

### Adjust the length of the locking rod

If a higher pressure is required in the wing in order to insert the locking rod in the basket it might be because the rods are set too long. The locking rods can be shortened by screwing in the end pieces.

- 1 In this case, loosen all the counter rings on the end pieces of the locking rod if needed using a 13/16" (21 mm) open-end wrench.
- 2 Slightly twist in the end pieces. (Fig. 10)
- 3 Tighten the counter rings with the wrench.



FIG. 7



FIG. 8





FIG. 9



FIG. 10

## Imprint

Copyright & Trademark

Fidlock® is a trademark of FIDLOCK GmbH

BA-EX-11 V23.1-US  
©muli cycles GmbH

Widdersdorfer Str. 190  
D-50825 Köln

**Text and graphics**  
muli cycles GmbH

**Photography**  
Tim Kaiser

**Layout**  
Friederike Wolf, Frieder Oelze



[www.muli-cycles.com](http://www.muli-cycles.com)